

# Wave II Monitors

## *USER'S MANUAL*



Oct 2019

Please note that the content of this document is subject to continuous revision.

Specifications subject to changes without prior notice. The contents of this page are property of North Invent Norway AS. All rights herein are reserved to North Invent Norway AS. This document cannot be reproduced without the written permission of the company.

NORTH INVENT  
Sørhauggata 128, NO-5527 Haugesund, Norway  
Phone: + 47 48 84 02 00  
post@northinvent.com www.northinvent.com



# Wave II Monitors

## Table of Contents

1. Terms and Abbreviations .....	3
2. Monitor Description .....	4
3. Product Identification .....	5
4. Packaging and Delivery .....	5
5. Mechanical Dimensions .....	5
6. Compass Safe-distance:.....	5
7. Electrical Installation.....	6
7.1. Pin-Assignments .....	6
8. Operating Instructions .....	11
8.1. Start-up .....	11
8.2. Firmware Update .....	11
8.3. Configuration data .....	12
8.4. OSD Navigation Using HMI .....	13
8.5. Source Input Selection.....	14
8.6. On Screen Display (OSD) .....	15
8.7. OSD Division into Folders, Menus, Sub-menus .....	15
9. SCOM support.....	23
9.1. Interface parameters: .....	23
9.2. Communication protocol: .....	23
10. DDC/CI support.....	25
11. Technical Specifications.....	26
12. Troubleshooting.....	26
13. Cleaning.....	26
14. Maintenance and Service.....	26
15. Update.....	26

# Wave II Monitors

## Foreword

Thanks for purchasing a North Invent Wave Monitor. Our series of rugged TFT LCD Display Monitors are conceived and built with the greatest care and state of the art electronic and software features. North Invent focuses its full expertise in offering dedicated display solutions, matching with your highest requirements and use.

Before starting operating the Monitor, we would like to suggest that you carefully read through the present document, as our aim with this User's Manuel is to give you the best experience in using our Monitors.

May you have any suggestions for improvements, or any feedbacks about this manual, the Monitor and/or its features, feel free to contact us. We will be pleased to oblige.

This User's Manual is for use only with our Wave II Monitors. To assess which series of Monitor you are in possession of, please check the Serial Number plate at the back of the screen. The mention shall bear WExxx (see below). May you have a different series of Monitor, please contact us, so to have the proper manual sent to your attention.

## 1. Terms and Abbreviations

DVI	Digital Visual Interface
DVI-A	- Analogue
DVI-I	- Integrated
DP	DisplayPort
HMI	Human- Machine Interface
LCD	Liquid Crystal Display
LED	Light-Emitting Diode
OSD	On-Screen Display
RGB	Red-Green-Blue
TFT	Thin Film Transistor
VGA	Video Graphics Array
DIU	Display Unit
ELU	Electronics Unit

# Wave II Monitors

## 2. Monitor Description

The Wave II monitors are a series of rugged TFT LCD Display Monitors available in 18,5", 19", 21,5", 24", 27" and 32" display sizes. All of our Monitors built following a modular approach and can be console mounted or equipped with stand (hinge).

*Each Monitor is constituted by the following set of components:*

Display Unit (DIU). Front end of the monitor consisting of the glass (optionally: touch) and displaypanel in the aluminium frame.

Electronics Unit (ELU). Back end of the monitor consisting mainly of powersupply and controllerboard.

DIU and ELU are modular and easily separable in order to ensure efficient configuration, maintenance and repair.

Optional accessories such as hinge (tiltable stand), panel mounting kits and HMI units (operator panels).

*Each Monitor presents the following materials and features:*

The Front, Display Frame and Cover are made of Marine Grade Aluminium allowing to reduce weight while eliminating corrosion problems.

The electronic set of components includes a specifically designed Power Supply, a high quality Display Controller, a Backlight LED driver and a custom-made Interface Board.

The Wave II Monitors use identical Power Supply which can be supplied with 90-264 VAC, 18-36 VDC or as a multipower combination depending on configuration. The Wave II Monitors come with DVI, Display Port, RS232, 2 x USB, LAN, HMI port and SD slot. Optionally you can get a second DVI, DVI out, a second Display Port, a second LAN and 2 x RS422/485.

Pixel pitch on all displays varies from 0,213 to 0,311 mm both in x and y direction depending on the display size (see data sheet). Pixel pitch equals 1.07 m viewing distance with a viewing angle of 1 minute of arc as required in IEC 62.288 section 7.5.1 for the 27" monitor, 0.96 m for the 24" monitor, 0.86 m for the 21" monitor, 1.02m for the 19" monitor and 0.74 m for the 18,5" monitor. Nominal viewing distance in a normal environment is 1.0 m.

*Each Monitor complies with the following international Standards and Requirements:*

All our Monitors has been tested by the Danish accredited testing bodies EKTOS TRS and DELTA (Danish Electronics, Light & Acoustics), and found to comply with the requirements of the International Association of Classification Societies (IACS) as well as the selected requirements of IEC 60945, IEC 60533, IEC 60529 and selected MIL standards.

The 19", 21", 24" and 27" Wave monitors are also tested according to IEC 62288, IEC 62388 and IEC 61174 and thereby ECDIS approved.

All our Monitors are approved in compliance with the international standard IEC 60945 : 2002 (Clause 4.4 Equipment category b, protected from the weather (formerly class B)), Maritime navigation and radio communication equipment and systems - General requirements - Methods of testing and required test results.

# Wave II Monitors

## 3. Product Identification

On the backside there are three markings identifying the monitor.

Display Unit P/N and serial number  
Electronics Unit (ELU) P/N and serial number  
Complete Monitor P/N and service tag number

Upon request we can assign an additional customer specific P/N.

Please see separate document for details about product numbering.

## 4. Packaging and Delivery

Please check the delivered goods immediately on receipt with respect to damages caused by transportation and inform the delivering freight carrier immediately, on site, about any visible transport damages. Additionally, inform us immediately in writing, at the latest within 5 work days, about any visible transport damages. At reception, the delivery includes the following items:

Wave Monitor  
AC power cable  
DC power plug  
MicroSD card inserted in the SD slot  
DVI cable (optional)  
DP cable (optional)  
USB cable (optional for touch)

## 5. Mechanical Dimensions

For panel cut out drawings and mechanical dimensions of monitors see data sheets.

## 6. Compass Safe-distance:


Every component of type approved equipment is tested in order to determine the minimum safe distances at which it should be installed from both the steering and the standard magnetic compasses, so not to significantly affect the accuracy of these compasses. A safe distance takes into account both the constant effect on a magnetic compass, of the presence of magnetic material but also any variable effect due, for instance, to electrical circuits or the opening/closing of drawers or panels. Thus, provided that a Monitor is not placed in a position nearer to the centre of the bowl of a magnetic compass than the recommended safe distance, the Monitor may be installed or removed without any need for adjustment of that compass.

The safe compass distances are mentioned on every Monitor and / or in the corresponding datasheet.

# Wave II Monitors

## 7. Electrical Installation


All electrical connections are to be found on the lower back side of the Monitor. Necessary electrical indications are to be found on the Terminal Plate at the bottom of the Monitor's backside.

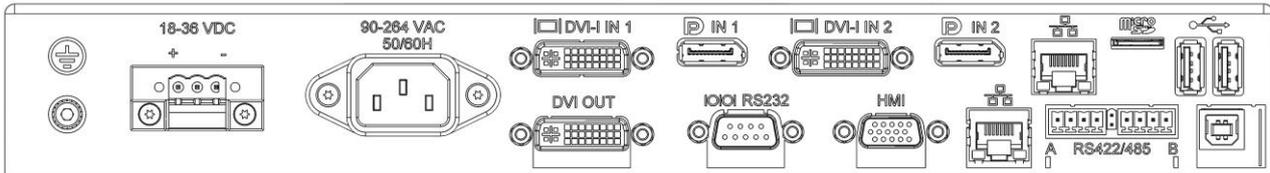

**Figure:** Terminal Plate for a full version Wave Monitor.

### 7.1. Pin-Assignments


#### AC Power

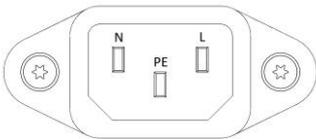

Pin	Description	Pin	Description	Pin	Description
N	Neutral	PE	Protective Earth	L	Line

The Monitor is connected to AC voltage by means of the standard AC power cable included in the delivery. The AC current to the Monitor must be limited by a 3A fuse or similar.

#### DC Power

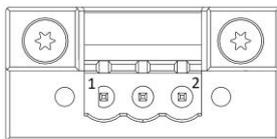


Pin	Description	Pin	Description	Pin	Description
1	Supply voltage, positive 18-36V	2	NC	3	Supply voltage negative

The Monitor is connected to DC voltage by means of the DC power plug included in the delivery and wires suitable for up to 8 A. The Monitor will not be damaged by reversed polarity, may it occur.

# Wave II Monitors


## DVI-I



Pin	Description	Pin	Description	Pin	Description
1	TMDS Data 2-	11	TMDS Data 1 Shield	21	TMDS Data 5+
2	TMDS Data 2+	12	TMDS Data 3-	22	TMDS Clock Shield
3	TMDS Data 2 Shield	13	TMDS Data 3+	23	TMDS Clock +
4	TMDS Data 4-	14	+5V Power	24	TMDS Clock -
5	TMDS Data 4+	15	GND (for +5V)	C1	Analog Red
6	DDC Clock	16	Hot Plug Detect	C2	Analog Green
7	DDC Data	17	TMDS Data 0-	C3	Analog Blue
8	Analog V-sync	18	TMDS Data 0+	C4	Analog H-sync
9	TMDS Data 1-	19	TMDS Data 0 Shield	C5	Analog RGB GND
10	TMDS Data 1+	20	TMDS Data 5-		

Remember to fasten the DVI cable's fixing screws for adequate connection.


## Displayport



Pin	Description	Pin	Description	Pin	Description
1	ML_3LN (Lane 3-)	8	GND	15	AUXP (Auxiliary Channel+)
2	GND	9	ML_LN1P (Lane 1+)	16	GND
3	ML_L3P (Lane 3+)	10	ML_LN0N (Lane 0-)	17	AUXN (Auxiliary Channel-)
4	ML_L2N (Lane 2-)	11	GND	18	Hot Plug Detect
5	GND	12	ML_LN0P (Lane 0+)	19	POR (Return for Power)
6	ML_L2P (Lane 2+)	13	Config1 (connected to GND)	20	PO (Power 3.3V / 500mA)
7	ML_L1N (Lane 1-)	14	Config2 (connected to GND)		

# Wave II Monitors


## RS232 – DB9 receptable



Pin	Description	Pin	Description	Pin	Description
1	Not connected	4	Not connected	7	Not connected
2	TxD (Transmit Data)	5	GND	8	Not connected
3	RxD (Receive Data)	6	Not connected	9	Not connected

The Monitor is equipped with a standard 9-pin D-SUB female connector for RS232 remote control. Further information about this interface and the remote control is to be found in separate document.


## RS422 / 485

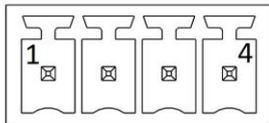

Pin	Description	Pin	Description
1	Tx+ (RS422)	3	Rx+ (RS422), Rx+/Tx+ (RS485)
2	Tx- (RS422)	4	Rx- (RS422), Rx-/Tx- (RS485)

Left and right connectors carry same signals and are connected in parallel internally. This allows for easy and more reliably wiring in daisy-chain configurations as both incoming and out-going wires can be terminated in separate connectors.


## LAN (RJ45)

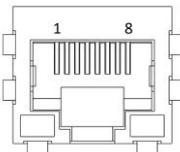

Pin	Description	Pin	Description
1	DA+	5	DC-
2	DA-	6	DB-
3	DB+	7	DD+
4	DC+	8	DD-


# Wave II Monitors

## USB A




Pin	Description	Pin	Description
1	GND	3	Data +
2	Data -	4	V <sub>CC</sub>

## USB B (optional for touch)

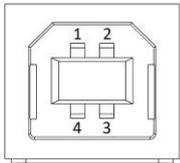

Pin	Description	Pin	Description
1	V <sub>CC</sub>	3	Data +
2	Data -	4	GND


## HMI



Pin	Description	Pin	Description	Pin	Description
1	+ key	6	POT_REF	11	BUZZER
2	- key	7	POT	12	5V
3	ESC key	8	GREEN LED	13	PSU A Indicator
4	Menu key	9	RED LED	14	PSU B Indicator
5	Power key	10	LED PWM	15	GND

Refer towering diagram on next page for recommended used of the HMI port.

# Wave II Monitors

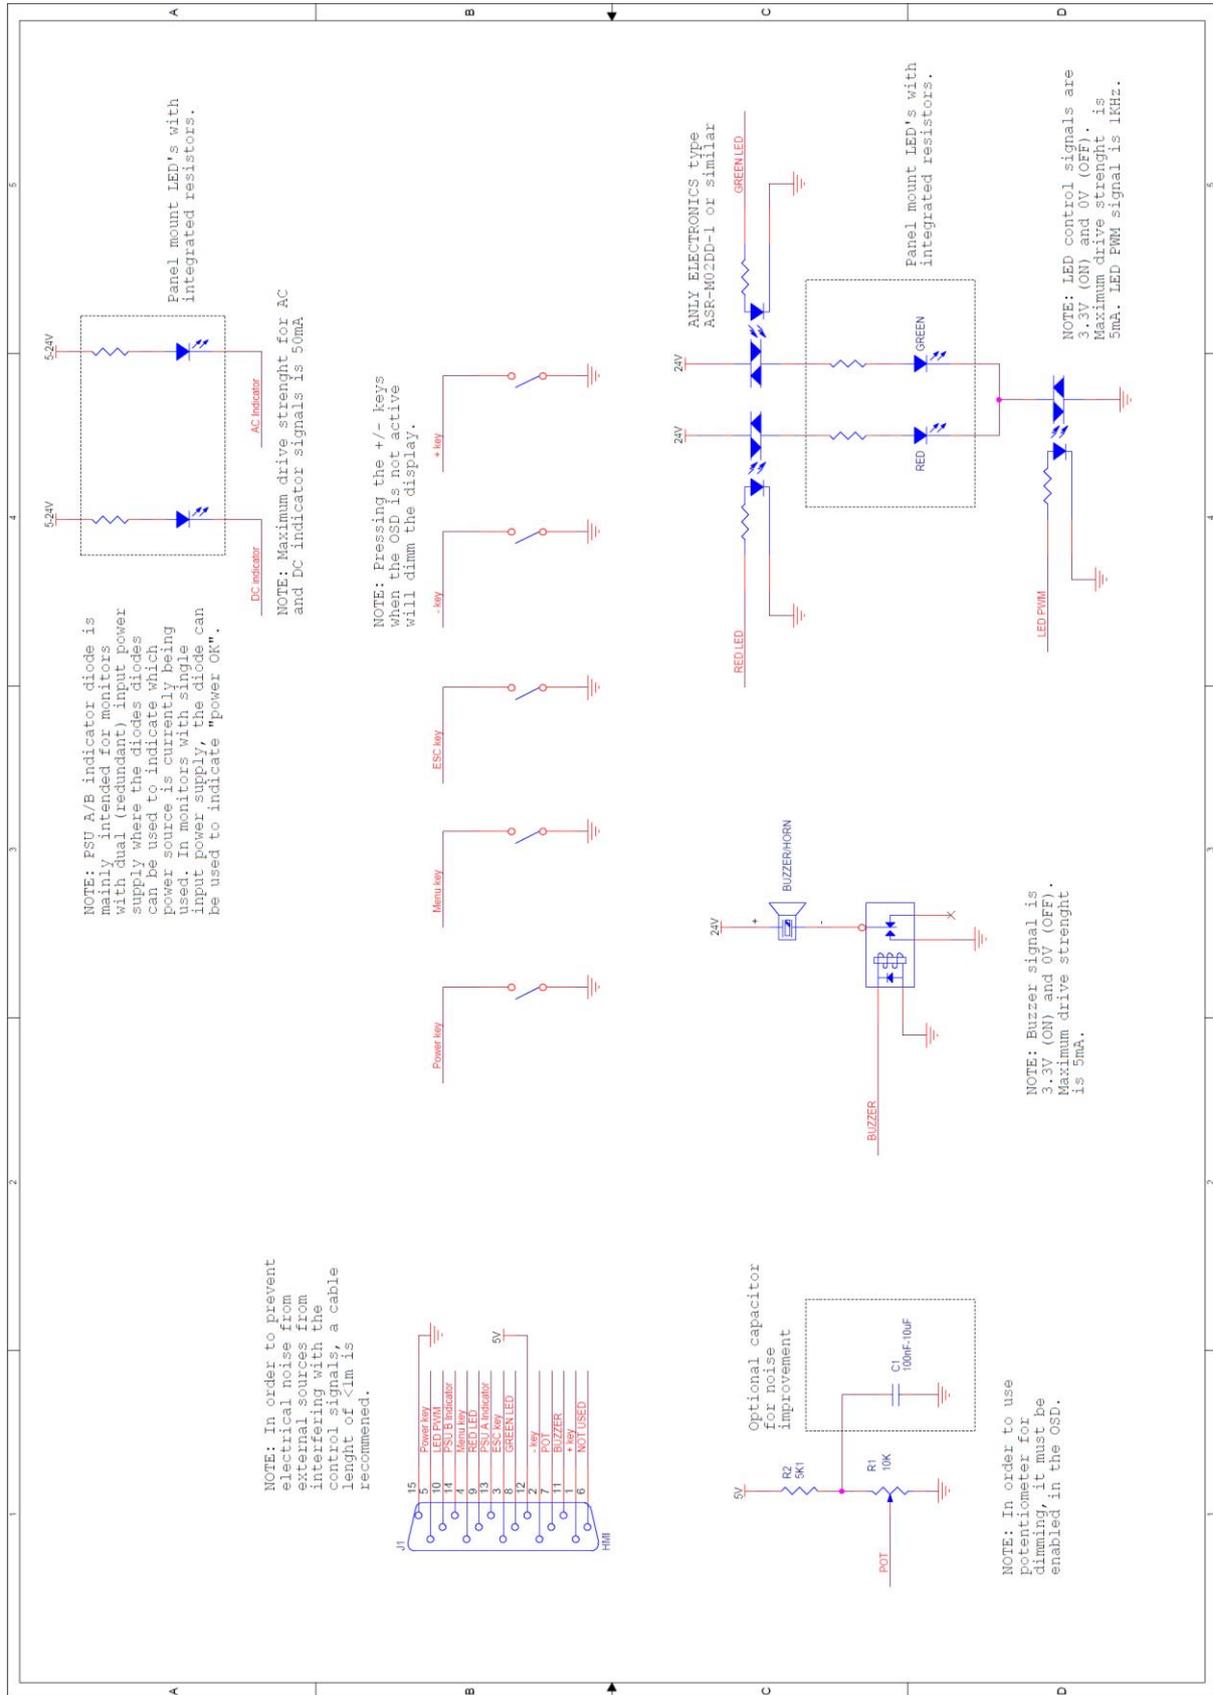

# Wave II Monitors

## 8. Operating Instructions

The following instructions assume that the Monitor has been correctly installed and that the commissioning work has been finalised.

### 8.1. Start-up

Ensure that power and a valid video signal are supplied to the Monitor.

Either insert power cable or, if HMI unit is connected, press the Power control once and the Power and relevant AC/DC indicators will light up.

There are three ways of controlling the monitor:

- Using a USB mouse connected to one of the USB ports on the backside of the monitor. After the monitor has completed booting (approximately 20 sec), press right button to bring up OSD.
- Using a HMI (if available) as described below.
- Remote control by connecting to a serial (RS232 / -422 / -485) or Ethernet port.

### 8.2. Firmware Update

**TRANSITIONAL UPDATE, necessary only for FW OSD 1.7 LPC 2.9 FPGA 1.6 and earlier:**

1. Make sure you have a FAT32 formatted USB stick.
2. Create a sub-folder on the USB stick and rename it "Recovery".
3. Copy the relevant "TRANSITIONAL firmware" image to the \Recovery\ subfolder on the USB stick.
4. Insert the USB stick into the monitor.
5. Insert an active DVI input into the monitor (not mandatory, but useful when observing the update progress).
6. Power the monitor by inserting the power cable.
7. The monitor will start the firmware update process which may last up to 5 min. The monitor may reboot a few times during the update process.  
**WARNING!:** DO NOT remove power from the monitor for at least 5 min during the update process. The process might appear completed without actually being finished.
8. When the update has completed, the monitor will display active input signal or grey picture (if no active input).
9. Verification: Open monitor OSD (Menu) either by HMI unit or by right clicking on a mouse connected to the monitor USB port and verify that firmware versions in the "Status" tab are as follows: OSD 1.9 LPC 3.1 FPGA 1.8
10. Proceed with FINAL UPDATE.

**FINAL UPDATE. For FW OSD: 1.8 LPC: 3.0 FPGA: 1.7 or newer only final update is necessary:**

1. Make sure you have a FAT32 formatted USB stick.
2. Create a sub-folder on the USB stick and rename it "Recovery".
3. Copy the relevant firmware image (two files) to the \Recovery\ subfolder on the USB stick.
4. Insert the USB stick into the powered monitor.
5. A dialogue box will be displayed asking if you want to update firmware.
6. Click yes and follow instructions on screen.
7. When the update has completed, the monitor will reboot.
8. Monitor will ask once again if you want to update firmware. Ignore and remove usb stick.
9. Update complete. Verification: Open monitor OSD (Menu) either by HMI unit or by right clicking on a mouse connected to the monitor USB port and verify that the firmware versions in the "Status" tab are as follows: OSD 2.0 LPC 3.3 FPGA 1.8

# Wave II Monitors

## 8.3. Configuration data

Key set-up parameters such as colour table, dimming curve etc are read by the monitor from a MicroSD card inserted in the SD card slot. As default, the following files are located on the sd-card:

Navn	/Endringsdato	Type	Størrelse
edid-dp1	26-01-2018 18:37	Tekstdokument	1 KB
edid-dp2	26-01-2018 18:37	Tekstdokument	1 KB
edid-dvi-d1	26-01-2018 18:37	Tekstdokument	1 KB
edid-dvi-d2	26-01-2018 18:37	Tekstdokument	1 KB
dimming	14-10-2017 15:45	Tekstdokument	4 KB
gamma	25-10-2017 10:11	Tekstdokument	5 KB
monitorinfo	07-09-2017 19:16	Tekstdokument	1 KB
paneltimings	11-01-2018 11:12	Tekstdokument	1 KB
wave_cfg	11-01-2018 11:10	Tekstdokument	1 KB


The four EDID files are compatible with the format used by "Phoenix" EDID editing tool.  
The other files are clear text and may be edited using a text editor like Notepad++

**WARNING:** manipulating the files on the sd-card may change monitor behaviour ultimately rendering the monitor useable!

# Wave II Monitors

## 8.4. OSD Navigation Using HMI

Controls and Indicators are found on the optional HMI Unit (operators panel) either mounted on the monitor or in connection with the Monitor.

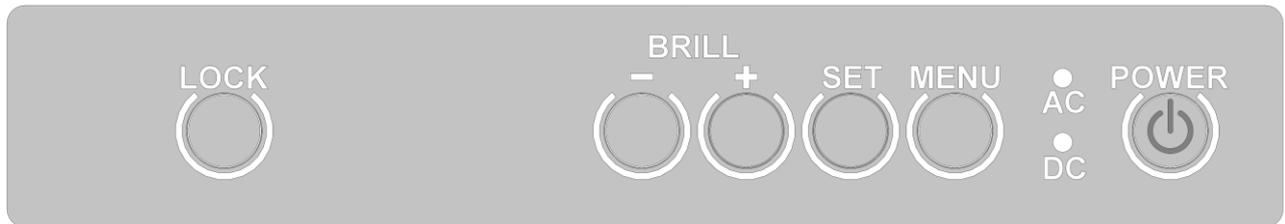

**Figure:** HMI Panel with controls and indicators.


Normal functioning of the Key Pads and Indicators are explained in the following table:

Control / Indicator	Function
POWER	Press once to switch the Monitor ON Press for 5 sec to switch the Monitor OFF
AC	Indicates that the Monitor is supplied with 90-264 VAC
DC	Indicates that the Monitor is supplied with 18-36 VDC
LOCK	No function on standard version
MENU	Press once to activate the OSD. Press to advance to next control within the OSD.
SET	Press to indicate/change the video input source (OSD not active). Press to go back one level in the OSD or to exit the OSD entirely if at top level.
+	Press and hold to increase the indicator brightness (OSD not active). Press or hold to increase values (OSD active).
-	Press or hold to decrease the indicator brightness (OSD not active). Press or hold to decrease values (OSD active).

# Wave II Monitors

## 8.5. Source Input Selection

The input source can be selected using the OSD (see below) or by pressing the SET button on the HMI (if available). The Monitor will search for a video signal on all inputs or on the last selected input source if Input Mode was set to "Manual" before powering off (see below).

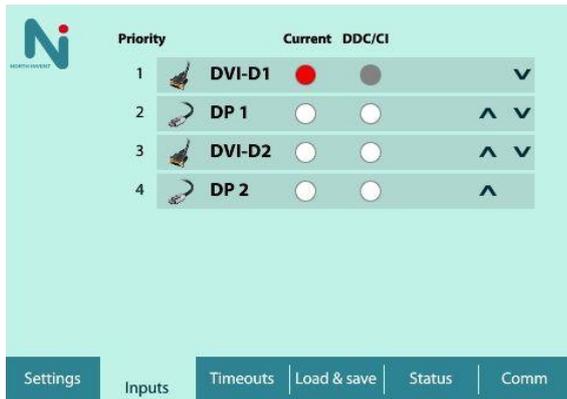

To select an input, mark the corresponding radio-button in the left column. Note that some monitor versions may have only 1 DVI and 1 DP input, in which case the input list will be reduced to two lines.

# Wave II Monitors

## 8.6. On Screen Display (OSD)

Approximately 20 seconds after monitor power on open OSD with mouse or HMI module. Most functions of the Monitor can be controlled using the OSD.


The OSD is activated by pressing the MENU key pad if you have a HMI module connected. Else you can open the OSD via a USB mouse by right clicking. Be aware of that the lock key pad on the HMI has no function on a standard monitor.

The screen backlight (brightness) can be adjusted using the +/- controls on the HMI module but it can also be adjusted using the OSD and remote control. Normal operation shall be backlight 100%.


The OSD will be deactivated according to the selected period after the last control has been pressed (OSD timeout).

## 8.7. OSD Division into Folders, Menus, Sub-menus

OSD main page:

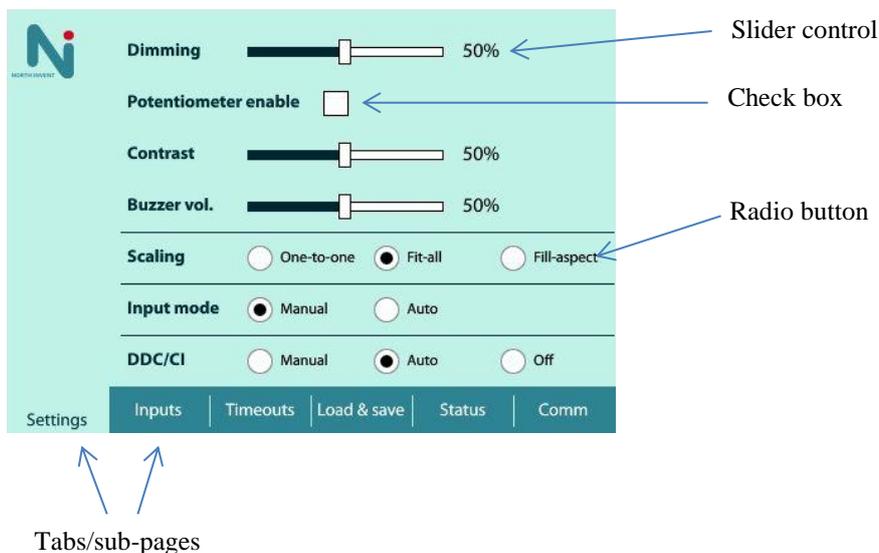


# Wave II Monitors

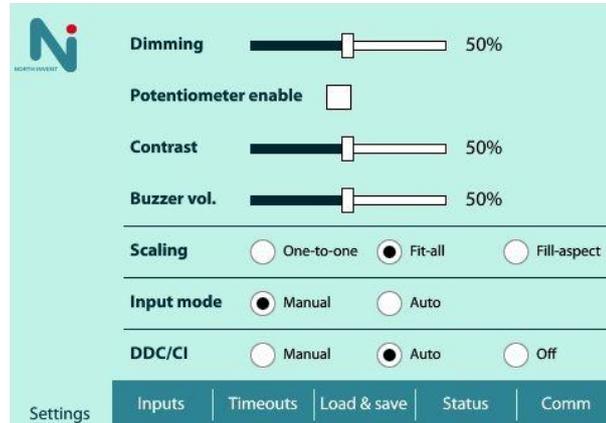


Function	Setting	Description
Dimming	0 – 100 % Default value: 50	Adjust the backlight brightness. At 0 % the backlight is turned off.
Potentiometer enable	Checked Not checked Default value: not checked	Enable the use of an analogue potentiometer connected to the monitor HMI connector.
Contrast	0 – 100 % Default value: 50	Adjust the picture contrast. Contrast is the difference in light intensity between the brightest white and the darkest black.
Buzzer vol.	0 – 100 % Default value: 50	Adjust the volume of the integrated buzzer. The buzzer will activate during adjustment to allow user to set to desired level.
Scaling	On-to-one Fit-all Fill-aspect Default value: One-to-one	<p><i>One-to-one:</i> 1:1 representation of the input signal. If e.g. a 640x480 signal is to be displayed on a 1920x1080 panel, you will see the picture centered using 640x480 pixels shown with a black frame around it.</p> <p><i>Fit all:</i> Regardless of input and output resolutions the input picture is scaled to fit the screen.</p> <p><i>Fill aspect:</i> Scaling mode depends on panel and source signal aspect ratio. This mode preserve the correct aspect ratio of the input signal, so if a 4:3 signal is to be displayed on a 16:9 display this adds black bars on both sides.</p>
Input mode	Manual Auto Default value: Auto	<p><i>Manual:</i> All signal inputs must be chosen manually, see "Inputs".</p> <p><i>Auto:</i> Automatic search for an active signal source on the inputs present in the hardware. Full range is DVI 1, DVI 2, DP 1 and DP 2.</p>
DDC/CI	Manual Auto Off	<p><i>Manual:</i> Enable remote control of the monitor by use of the DDC/CI protocol through a manually selected signal input, see "Inputs"</p> <p><i>Auto:</i> The monitor will listen for DDC/CI commands on all inputs simultaneously.</p> <p><i>Off:</i> DDC/CI communication disabled.</p>

# Wave II Monitors

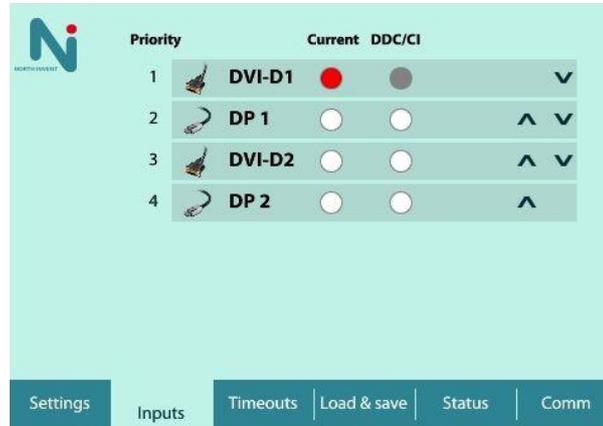

Function	Setting	Description
Manual input selection	"Current" box checked "Current box" not checked	If "Input Mode" is set to "Manual" in the "Settings" tab, set active input by checking the "Current" box.  Note that some monitor versions may have only 1 DVI and 1 DP input, in which case the input list will be reduced to two lines.
Auto input selection	Not applicable, see "Settings" tab.	If "Input Mode" is set to "Auto" in the "Settings" tab, the monitor will scan for an active signal source on the inputs present in the hardware. Full range is DVI 1, DVI 2, DP 1 and DP 2.  Priority can be set by utilizing the up and down arrows. In case of several active inputs, the monitor will display the signal from the highest priority with active input. If signal is lost on the active input, the monitor will switch to the next priority input with valid signal (if any). If valid signal reappears on a higher priority input, the monitor will switch back to displaying this signal.
Manual DDC/CI selection	"DDC/CI" box checked "Current box" not checked	If "DDC/CI" is set to "Manual" in the "Settings" tab, set active DDC/CI input by checking the "DDC/CI" box.
Auto DDC/CI selection	Not applicable, see "Settings" tab.	If "DDC/CI" is set to "Auto" in the "Settings" tab, the monitor will listen for DDC/CI commands on all inputs simultaneously.
DDC/CI selection "OFF"	Not applicable, see "Settings" tab.	If "DDC/CI" is set to "Off" in the "Settings" tab, the "DDC/CI" checkboxes in the "Inputs" tab will be inactive.

# Wave II Monitors

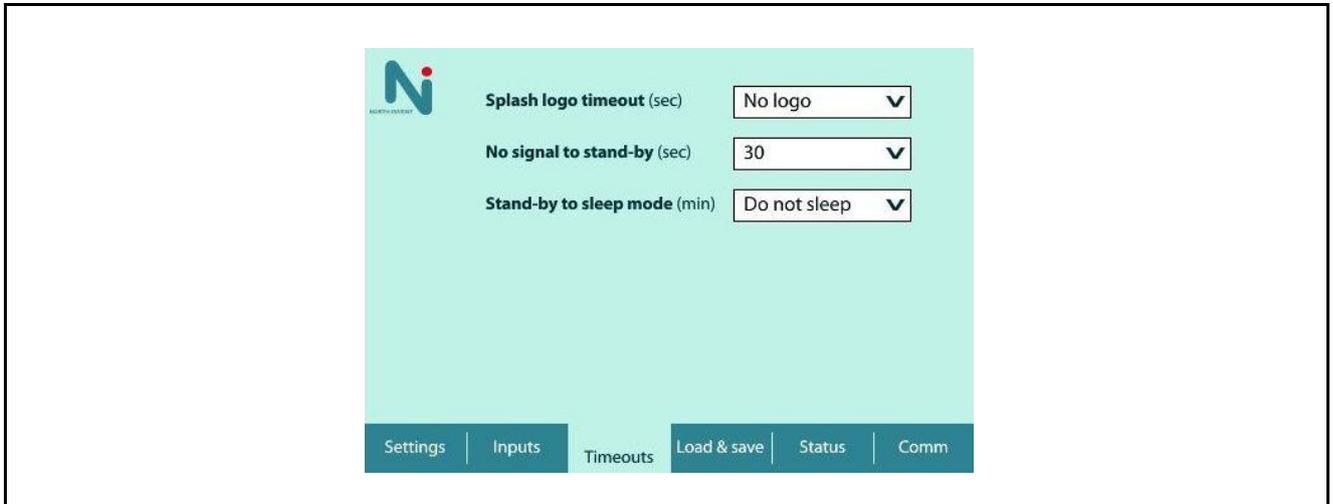


Function	Setting	Description
Splash logo timeout (sec)	No logo 1, 2, 3, 4, 5, 10, 30, 60 sec. Persistent	The monitor can display a logo during startup (bootlogo) based on a .png file located on the MicroSD card.
No signal to stand-by (sec)	3, 5, 10, 30, 60 seconds Stay on	Set the time from signal lost to standby mode. In standby mode the monitor is put low power state while still maintaining ability to detect if an input signal becomes active.
Stand-by to sleep mode (min)	3, 5, 10, 30, 60 minutes Do not sleep	Set the time from standby mode to sleep mode. In sleep mode the monitor is put in the lowest possible power state while still maintaining ability to receive and respond to a MCCS power mode command and HMI power button.

# Wave II Monitors




Function	Setting	Description
Save settings	Activate button	Activate "Save settings" button to store all settings in the OSD except those from the status tab.
Recall saved settings	Activate button	Activate "Recall settings" button to recall saved settings.
Load factory settings	Activate button	Activate "Load factory settings" button to recall factory default settings.

# Wave II Monitors

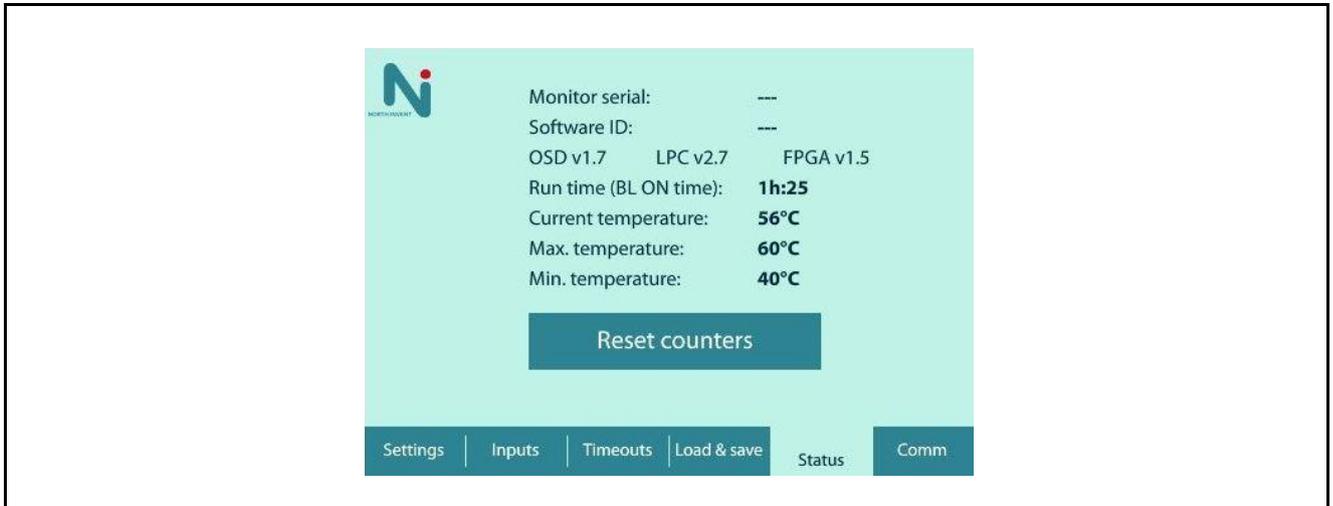

Function	Setting	Description
Monitor serial	Read only	Monitor serial number as read from the "monitorinfo.txt" file on the MicroSD card.
Software ID	Read only	Software identification number as read from the "monitorinfo.txt" file on the MicroSD card.
Run time (BL ON time)	Read only	Accumulated time for "power on" state on the monitor backlight.
Current temperature	Read only	Reads out current temperature inside the monitor.
Max. temperature	Read only	Maximum temperature readout since last Reset counters.
Min. temperature	Read only	Minimum temperature readout since last Reset counters.
Reset counters	Activate button	Activate button to reset "Run time" and temperature counters.

# Wave II Monitors

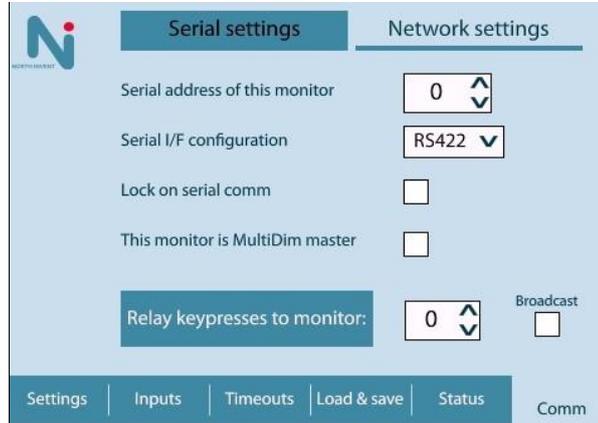

Function	Setting	Description
Serial address of this monitor	1 – 254	Set the serial address of the monitor by utilizing the up and down arrows.  The monitor will listen for and respond to SCOM commands on all serial interfaces and the Ethernet interface only if a received command matches this address or if the command is broadcast. The monitor will not send a response to a broadcast command.
Serial I/F configuration	RS422 RS485	Configure the RS422 / 485 dual connector to either RS422 or RS485 protocol by utilizing the dropdown menu.
Lock on serial comm	Checked Not checked	By activating the checkbox the OSD cannot be activated if under serial control.  When the checkbox is first checked, the operator will be presented with a dialog that allows him to set a 4 digit pin code. Later, if the operator tries to open the menu, he must input the same pin code to do so.
This monitor is MultiDim master	Checked Not checked	Activate checkbox to set monitor to MultiDim master.  This feature will allow an array of monitors to be dimmed and controlled from a single monitor (the "MultiDim master"). When changing the dimming level on the MultiDim master, the monitor will also transmit a BRT broadcast command on the RS422/485 interface reflecting the new setting of the backlight level.
Relay keypresses to monitor	1 – 254  "Broadcast" checkbox: Checked Not checked	Set the serial address of another monitor on the same network in order to remote control such monitor.  This feature allows the operator to relay the keypresses on a local HMI to a remote monitor by RS485/422 to control it. Keypresses are forwarded when the "broadcast " button is checked. To stop relaying keypresses, the operator may uncheck the "broadcast" button using a mouse or press and hold the ESC button for 5 sec.

# Wave II Monitors

The screenshot shows the 'Network settings' tab of the Wave II Monitor configuration interface. The interface includes a 'Serial settings' tab and a 'Network settings' tab. The 'Network settings' tab is active and displays the following configuration options:

- DHCP:**  (unchecked)
- This monitor is SCOM server:**  (unchecked)
- IP address:** 192.168.1.2
- Subnet mask:** 255.255.255.0
- Default gateway:** 192.168.1.1
- DNS:** 8.8.8.8
- SCOM server IP:** 192.168.1.10

At the bottom of the interface, there are navigation buttons: Settings, Inputs, Timeouts, Load & save, Status, and Comm. A 'No network' warning icon is visible on the left side of the settings panel.

Function	Setting	Description
DHCP	Checked Not checked	With this option checked, the monitor will search the network for a DHCP server and if found acquire network settings from this server.
This monitor is SCOM server	Checked Not checked	Currently no function (not yet implemented).
Ip Adress	0-255;0-255;0-255;0-255	IP address of the monitor.
Default Gateway	0-255;0-255;0-255;0-255	IP address of the network gateway.
DNS	0-255;0-255;0-255;0-255	IP address of the Domain Name Server.
SCOM server IP	0-255;0-255;0-255;0-255	Currently no function (not yet implemented).

# Wave II Monitors

## 9. SCOM support.

The monitor supports remote control by SCOM command on RS232 and RS485/422 interfaces as well as the LAN interface (refer to 7.1 for pin assignments of the different connectors).

### 9.1. Interface parameters:

Parameter	Value
Baud rate	9.600
Parity	No
Data bits	8
Start bits	1
Stop bits	1
Handshake	No

### 9.2. Communication protocol:

The communication protocol complies with IEC 61162-1 (NMEA):

Byte 0	1	2 to 4	5	6	7 to LEN+6	LEN+7
ATT	ADR	CMD	LEN	IHC	DAT	IDC

The min message length is 7 bytes and the max message length is 82 bytes. The different bytes are described below.

#### Attention (ATT) byte:

This byte identifies the message start:

ATT	Description
0x07	Command
0x06	Acknowledge (OK)
0x15	Acknowledge (error)

#### Address (ADR) byte:

ADR	Description
0xFF	All controllers (0-15)
0x00	Controller 0
0x01	Controller 1
-	etc.
0x0F	Controller 15

# Wave II Monitors

## Command (CMD) bytes:

ASCII	Byte0	Byte1	Byte2	Data	Description
TMP	0x54	0x4D	0x50	0x52	Return current temperature
MAN	0x4D	0x41	0x4E	-	Return manufacture ID "NIN".
TYP	0x54	0x59	0x50	-	Return monitor type as defined in the monitorinfo.txt file located at the microSD-card. Syntax for setting TYP value in monitorinfo.txt: MONITOR_TYPE={string up to 16 characters}
BRT	0x42	0x52	0x54	1 byte	Set BL level.
SLI	0x53	0x4C	0x49	1 byte	Set current input: 0x03 = DVI1, 0x0F = DP1, 0x04 = DVI2 and 0x10 = DP2.
SWI	0x53	0x57	0x49	-	Return sw version as defined in the monitorinfo.txt file located at the microSD-card. Syntax for setting SW value in monitorinfo.txt: SOFTWARE_ID={string up to 16 characters}
ETC	0x45	0x54	0x43	-	Return system run time
SNB	0x53	0x4E	0x42	-	Return Serial number
LFD	0x4C	0x46	0x44	-	Command monitor to Load factory defaults
BZZ	0x42	0x5A	0x5A	1 byte	Buzzer control (note that both 0xFF and 0x01 turn on buzzer, 0x00 turn off buzzer)

Furthermore, commands for simulating HMI keypresses are available:

Corresponding HMI key	Command syntax (complete command)
Menu button (J25_HMI3)	07 FF 4D 43 43 01 25 F7 08
ECS button (J25_HMI2)	07 FF 4D 43 43 01 25 FB 04
+ button (J25_HMI0)	07 FF 4D 43 43 01 25 FC 03
- Button (J25_HMI1)	07 FF 4D 43 43 01 25 FD 02

## Data length (LEN) byte:

Length of DAT in bytes (0-74 bytes)

## Inverse Header Checksum (IHC) byte:

It is a simple 8 bit checksum of the header data (bytes 0 to 5) where a bit-wise inversion has been performed. The checksum must be initialised to 0. The 8 bit sum (without carry) of bytes 0-6 must be 0xFF.

$IHC = 0xFF - (ATT + ADD + CMD0 + COM1 + COM2 + LEN)$ , where only 8 bits are used.

If a message checksum fails the controller will reply with the attention byte 0x15 and no data bytes.

## Data (DAT) bytes:

The data bytes will only be send if data length (LEN) is greater than 0.

The data bytes are designated DAT0, DAT1, DAT2, etc.

# Wave II Monitors

## Inverse Data Checksum (IDC) byte:

This byte will only be send if data length (LEN) is greater than 0. It is an 8 bit checksum of the data bytes (bytes 7 to LEN+6) where a bit-wise inversion has been performed. The checksum is initialised to 0. The 8 bit sum (without carry) of bytes 7 to LEN+7 is be 0xFF.

$IDC = 0xFF - (DAT0 + DAT1 + DAT2 + \dots)$ , where only 8 bits are used

If a message checksum fails the controller will reply with the attention byte 0x15.

## 10. DDC/CI support

The monitor supports remote control by DDC/CI over DVI/DP (refer to 7.1 for pin assignments of the different connectors). The DDC/CI uses the MCCS protocol, and we propose downloading the softMCCS software to get started and learn more about this.

Command	Description
0x04	Restore Factory defaults:
0x10	Back light control. Range: 0-100.
0x12	Contrast: Range: 0-100.
0x60	0x60 – Input select..
0xD6	Power mode
0xE1	Power off: Same function as 0xD6
0xE2	Backlight: Same function as 0x10.
0xE4	Zoom: Set scaling mode: 0 = One-to-one 1 = Fill-all 2 = Fill-to-aspect
0xE5	Buzzer: Control buzzer state (J25 pin 20) 0 = Buzzer OFF (pin20=low) 1 = Buzzer ON (pin 20=high)
0xE6	Touch control 0 = Touch disabled 1 = Touch enabled
0xEB	Input select: Shall be used to select active input. 1 = DVI-D in J7 (DVI2) 2 = DP in J8 (dp2)
0xF0	Actual temperature: Use SMARC based temp sensor or sensor in the i.MX cpu.
0xF1	Min temperature: Lowest temperature measured.
0xF2	Max temperature: Highest temperature measured.
0xF3	Run time: Accumulated run time for the system defined as hours:minutes where the back light has been active.
0xFD	Software version.
0xFE	Serial number.

# Wave II Monitors

## 11. Technical Specifications

Please refer to the relevant datasheet for the technical specifications for your product of choice.

## 12. Troubleshooting

Section to be completed.

## 13. Cleaning

Dust and dirt which typically accumulates on the front of the Monitor, can easily be removed using a soft cloth moistened with hot water.

A solvent can also be used but never use any kind of abrasive compound.

Oil and grease can be removed using pure alcohol.

The front glass can be cleaned with any solvent suitable for glass.

## 14. Maintenance and Service

Wave II monitors are conceived so to be almost maintenance free.

If the Monitor malfunctions, please check if the problem can be solved with *troubleshooting*.

If the problem persists, please contact North Invent for service instructions.

Allow app. 1 hour stabilization time before measuring luminance and colors.

## 15. Update

The technical documentation is subject to change. For an updated version please visit our website [www.northinvent.com](http://www.northinvent.com).